


## SMART FORTWO FUEL DOOR INSTALLATION INSTRUCTIONS

APPLICABLE MODELS:  
W451 Model Year 2007+

### PACKAGE CONTENTS

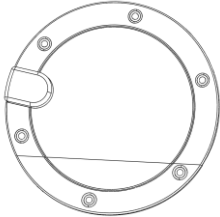

FUEL DOOR ASSEMBLY  
FDAX01SL  
(QTY.1)




1.5mm Allen wrench  
(QTY.1)

### TOOLS REQUIRED



Small Flat blade  
screwdriver

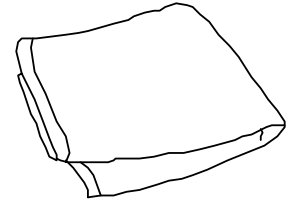

CLEAN RAG

## 0 BEFORE INSTALLATION

- 1) READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING.
- 2) CLEAN INSTALLATION AREA.
- 3) WORK IN WELL VENTILATED AREA.
- 4) BE CAREFUL NOT TO SCRATCH PAINT.

## 1 REMOVE STOCK FUEL DOOR

- 1) COMPLETELY OPEN THE STOCK FUEL DOOR.
- 2) ON THE BACK SIDE OF THE STOCK FUEL DOOR, INSERT A SMALL FLAT BLADE SCREWDRIVER INTO THE OPENING AT THE EDGE OF THE FUEL DOOR WHERE THE FINGER POCKET IS.
- 3) TOWARDS THE BOTTOM OF THE OPENING, THERE IS A PLASTIC LOCK TAB APPROX. ONE INCH INSIDE.
- 4) GENTLY TWIST THE SCREWDRIVER 1/8 TURN IN EITHER DIRECTION. THIS WILL DEPRESS THE LOCK TAB FROM THE STOCK FUEL DOOR AND THE HINGE ASSEMBLY.
- 5) NOW GENTLY PULL THE STOCK FUEL DOOR DIRECTLY AWAY FROM THE VEHICLE.
- 6) AFTER A SLIGHT CATCH, THE STOCK FUEL DOOR SHOULD RELEASE.
- 7) IF THE DOOR DOES NOT RELEASE, CONTINUE GENTLY TWISTING THE SCREWDRIVER WHILE SIMULTANEOUSLY PULLING THE FUEL DOOR AWAY FROM THE VEHICLE UNTIL THE DOOR RELEASES.



## 2 ATTACH ALUMINUM FUEL DOOR

- 1) LINE UP THE TABS ON THE ALUMINUM FUEL DOOR WITH THE SLOTS ON THE STOCK HINGE.
- 2) AFTER ALIGNING THE FOUR FUEL DOOR ATTACHMENT TABS WITH THEIR COUNTERPARTS ON THE HINGE ASSEMBLY, SLIDE THE FUEL DOOR ONTO THE HINGE UNTIL IT IS FULLY SEATED.
- 3) HAND-TIGHTEN THE TWO HEX SET SCREWS WITH THE SUPPLIED 1.5MM ALLEN WRENCH.



## 3 CHECK FIT

- 1) CLOSE THE FUEL DOOR AND INSPECT THE FIT. THE GAPS AROUND THE FUEL DOOR SHOULD BE CONSISTENT.

